


# LANDMARK Assembly Instructions

1

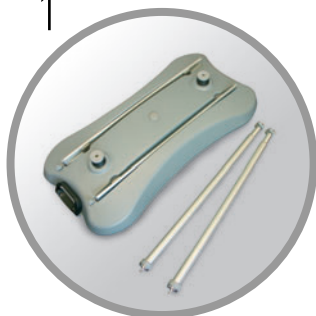


Remove base and telescopic poles from carry bag.

2



Rotate stabilising foot outwards underneath the base for extra stability.

3

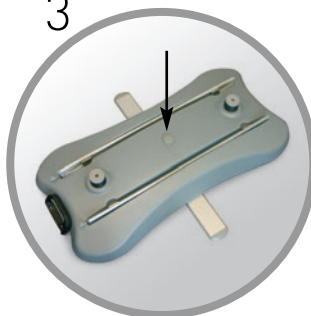


Fill base with water through centre plug and screw cap back on.

4




Screw the telescopic poles tightly into the spring mounts.

5

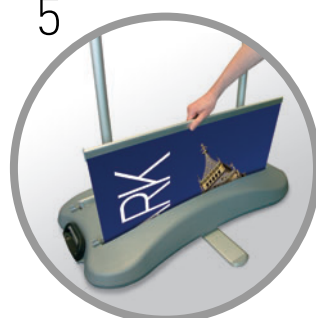

Pull out graphic upwards from the base holding the graphic rail.

6

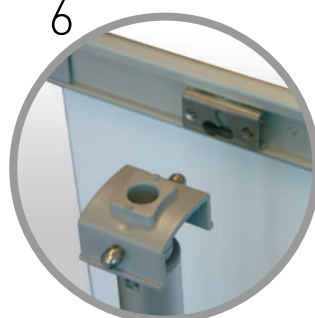

Align and insert the locating pins of the telescopic poles to the holes of the graphic rail. Move the graphic rail to the right and lower to secure.

7



Attach other end of graphic rail to pole moulding. Repeat for the other graphic

8



Raise both telescopic poles at the same time to the desired height option, ensuring that each section clicks into position.

9



Your installation is now complete.

